


# KEMX-600A

Wide Temperature Industrial Motherboard in Mini-ITX form factor with 2<sup>nd</sup> generation Intel® Core™ i3/i5/i7 Processors and QM67 Express Chipset

## User's Guide

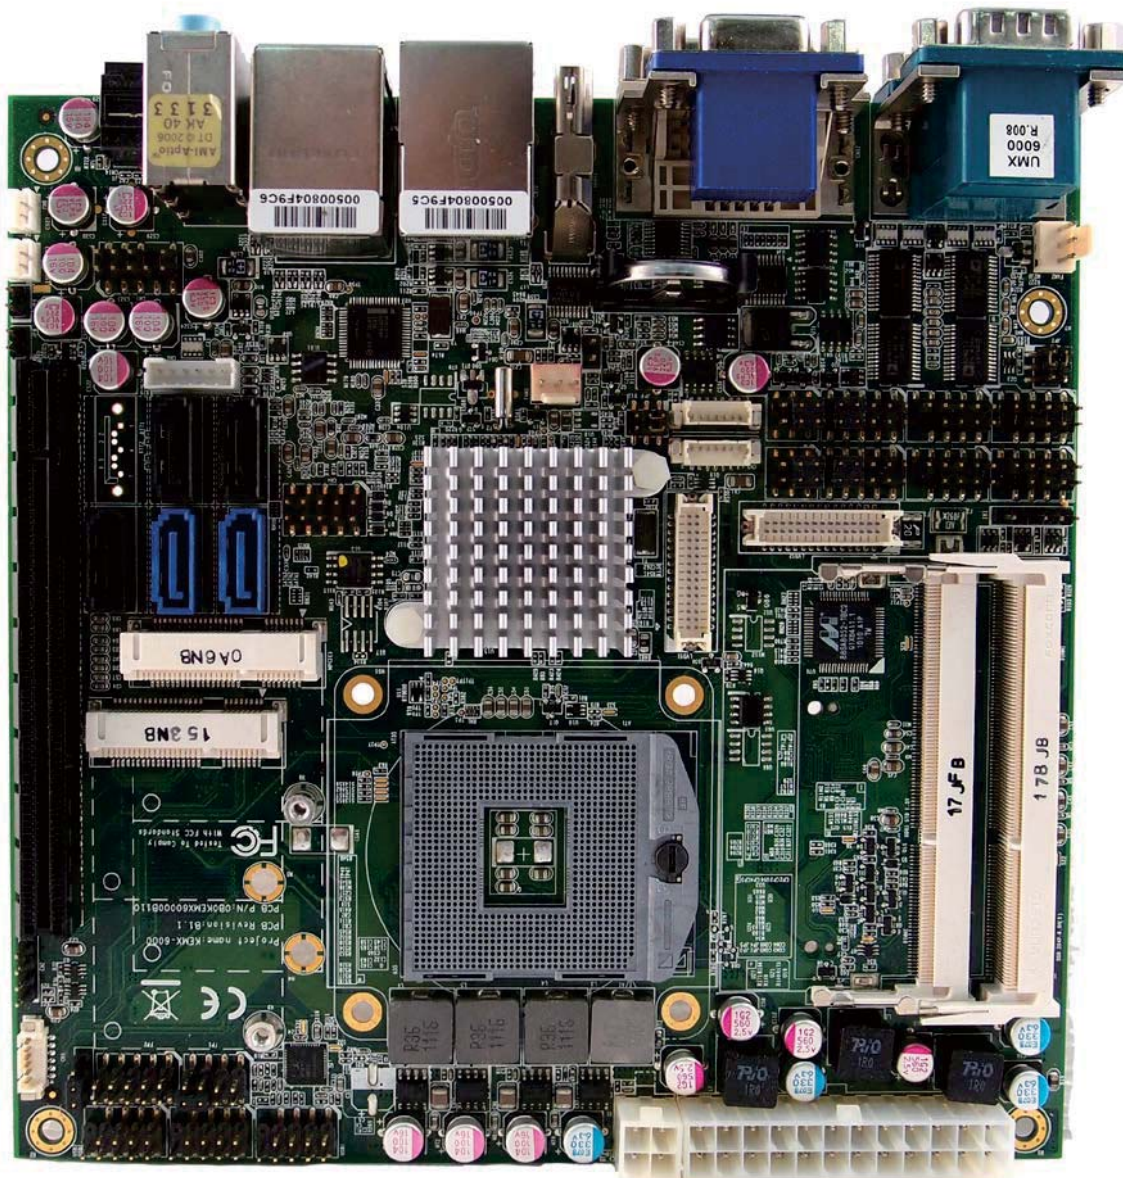

**Contact Info:**                      **Quanmax Inc.**  
**4F, No. 415, Ti-Ding Blvd. Sec. 2 NeiHu District,**  
**Taipei 114 Taiwan**  
**Tel: +886-2-2799-2789**  
**Fax: +886-2-2799-7399**

**Visit our site at:**                **[www.quanmax.com](http://www.quanmax.com)**

© 2015 Quanmax Inc. All rights reserved.

*The information in this user's guide is provided for reference only. Quanmax does not assume any liability arising out of the application or use of the information or products described herein. This user's guide may contain or reference information and products protected by copyrights or patents and does not convey any license under the patent rights of Quanmax, nor the rights of others.*

*Quanmax is a registered trademark of Quanmax. All trademarks, registered trademarks, and trade names used in this user's guide are the property of their respective owners. All rights reserved. This user's guide contains information proprietary to Quanmax. Customers may reprint and use this user's guide in other publications. Customers may alter this user's guide and publish it only after they remove the Quanmax name, cover, and logo.*

*Quanmax reserves the right to make changes without notice in product or component design as warranted by evolution in user needs or progress in engineering or manufacturing technology.*

*Changes which affect the operation of the unit will be documented in the next revision of this user's guide.*

# Content

Content.....	3
Figures .....	5
Tables.....	6
Safety Instructions.....	9
<input type="checkbox"/> Before You Begin.....	9
<input type="checkbox"/> When Working Inside a Computer.....	9
<input type="checkbox"/> Preventing Electrostatic Discharge.....	10
Preface.....	12
<input type="checkbox"/> How to Use This Guide.....	12
<input type="checkbox"/> Unpacking.....	12
<input type="checkbox"/> Regulatory Compliance Statements .....	12
<input type="checkbox"/> Warranty Policy .....	13
<input type="checkbox"/> Maintaining Your Computer .....	14
Chapter 1 Introduction .....	17
<input type="checkbox"/> Overview .....	17
<input type="checkbox"/> Product Specifications .....	18
<input type="checkbox"/> System Block Diagram .....	20
<input type="checkbox"/> Mechanical Dimensions.....	21
Chapter 2 Hardware Settings .....	22
<input type="checkbox"/> Overview .....	22
<input type="checkbox"/> Jumper Settings and Pin Definitions.....	23
Jumper Settings .....	25
Rear Panel Pin Assignments .....	28
Main Board Pin Assignments.....	31
Chapter 3 System Installation.....	45
<input type="checkbox"/> Expansion Interfaces .....	45
<input type="checkbox"/> Memory Module Installation.....	46
Chapter 4 AMI BIOS Setup.....	47
<input type="checkbox"/> Overview .....	47
<input type="checkbox"/> Main Menu.....	48
<input type="checkbox"/> Advanced Menu.....	48
<input type="checkbox"/> Boot Menu .....	59
<input type="checkbox"/> Security Menu.....	60
<input type="checkbox"/> Save & Exit Menu.....	61

## Content

Chapter 5	Driver Installation.....	63
Appendix A	DIO (Digital I/O) Sample Code.....	64
Appendix B	WatchDog Timer Sample Code .....	66

# Figures

Figure 1 Block Diagram .....	20
Figure 2 Mechanical Dimensions .....	21
Figure 3 Jumper Connector .....	22
Figure 4 Jumper and Connector Locations .....	24
Figure 5 Rear Panel IO .....	28
Figure 6 Expansion Interfaces .....	45
Figure 7 Align the SO-DIMM Memory Module with the onboard socket.....	46
Figure 8 Press down on the SO-DIMM Memory Module to lock it in place	46

## Tables

Table 1 KEMX-600A Specification .....	19
Table 2 Jumper List.....	25
Table 3 JP1 AT / ATX Mode Selection .....	25
Table 4 JP2 Signal / Power Selection for COM5.....	25
Table 5 JP3 Panel Backlight Power Selection for LVDS2.....	26
Table 6 JP4 Signal / Power Selection for COM6.....	26
Table 7 JP5 Panel Backlight Power Selection for LVDS1 .....	26
Table 8 JP6 Backlight Power Enable Selection for LVDS1.....	26
Table 9 JP7 Backlight Power Enable Selection for LVDS2.....	27
Table 10 JP8 RTC Reset Selection.....	27
Table 11 JP9 SRTC Reset Selection.....	27
Table 12 JP11 Flash Description Security Over-ride .....	27
Table 13 Rear Panel Connector List .....	28
Table 14 AUDIO1, 3 Stack-up Azalia Audio Phone Jack .....	28
Table 15 CN10 LAN1 & USB2.0 Port 0, 1 Connector.....	28
Table 16 CN11 LAN2 & USB2.0 Port 2,3 Connector.....	29
Table 17 CN12 CRT DB-15 & DVI-D Connector .....	29
Table 18 CN13 RS-232 / 422 / 485 Port 1, 2 Connector .....	30
Table 19 HDMI Connector.....	30
Table 20 ATX1 24-pin ATX Power Input Connector .....	31
Table 21 ATX 4-pin ATX Power Input Connector.....	31
Table 22 CFD1 CF Type II Connector .....	32
Table 23 COM3 RS-232 Port 3 Pin Header.....	32
Table 24 COM4 RS-232 Port 4 Pin Header.....	33
Table 25 COM5 RS-232 Port 5 Pin Header.....	33
Table 26 COM6 RS-232 Port 6 Pin Header.....	34
Table 27 CN1 SIM Interface Wafer for MPCIE1 .....	34
Table 28 CN2 MPCIE Activity Indication Pin Header.....	34
Table 29 CN3 Panel Backlight Wafer for LVDS2 .....	35
Table 30 CN4 Digital Input / Output Pin Header.....	35
Table 31 CN5 Panel Backlight Wafer for LVDS1 .....	35
Table 32 CN6 Keyboard & Mouse Wafer .....	36
Table 33 CN7 Azalia Front Audio Pin Header.....	36
Table 34 CN8 Right Channel 2W Audio AMP Output Wafer.....	36



Table 35 CN9 Left Channel 2W Audio AMP Output Wafer .....	36
Table 36 DIMM1 Primary DDR3 Memory SO-DIMM Socket .....	36
Table 37 DIMM2 Secondary DDR3 Memory SO-DIMM Socket .....	36
Table 38 FAN1 PU FAN Wafer .....	37
Table 39 System FAN Wafer .....	37
Table 40 FP1 Front Panel 1 Pin Header .....	37
Table 41 FP2 Front Panel 2 Pin Heade.....	37
Table 42 IR1 IrDA Pin Header .....	37
Table 43 LVDS1 Primary 24-bit, 2-channel LVDS Panel Connector.....	38
Table 44 LVDS2 Secondary 24-bit, 2-channel LVDS Panel Connector.....	38
Table 45 PCIE1 Mini-PCIE Express v1.2 Socket 1 .....	39
Table 46 PCIE2 Mini-PCIE Express v1.2 Socket 2 .....	40
Table 47 PEG1 PCIE Express x 16 Slot.....	41
Table 48 SATA1 Serial ATA Port0 Connector .....	42
Table 49 SATA2 Serial ATA Port1 Connector .....	42
Table 50 SATA3 Serial ATA Port2 Connector .....	42
Table 51 SATA4 Serial ATA Port3 Connector .....	43
Table 52 SATA5 Serial ATA Port4 Connector .....	43
Table 53 SATA6 Serial ATA Port5 Connector .....	43
Table 54 USB1 USB2.0 Port 4, 5 Pin Header .....	44
Table 55 USB2 USB2.0 Port 6, 7 Pin Header .....	44
Table 56 USB3 USB2.0 Port 8, 9 Pin Header .....	44
Table 57 BIOS Main Menu .....	48
Table 58 Advanced Menu.....	48
Table 59 Advanced Menu – Display Configuration.....	49
Table 60 Advanced Menu – Super IO Configuration.....	50
Table 61 Advanced Menu – Super IO Configuration – Serial Port 1 Configuration .....	50
Table 62 Advanced Menu – Super IO Configuration – Serial Port 2 Configuration .....	51
Table 63 Advanced Menu – Super IO Configuration – Serial Port 3 Configuration .....	51
Table 64 Advanced Menu – Super IO Configuration –Serial Port 4 Configuration .....	52
Table 65 Advanced Menu – Super IO Configuration –Serial Port 5 Configuration .....	53
Table 66 Advanced Menu – Super IO Configuration –Serial Port 6 Configuration .....	53

## Tables

Table 67 Advanced Menu –Power Management Configuration.....	54
Table 68 Advanced Menu –SATA Configuration.....	55
Table 69 Advanced Menu –AMT Configuration .....	55
Table 70 Advanced Menu – USB Configuration .....	57
Table 71 Advanced Menu – H/W Monitor .....	58
Table 72 Advanced Menu – CPU Advanced Configuration .....	58
Table 73 Boot Menu .....	59
Table 74 Security Menu .....	60
Table 75 Save & Exit Menu .....	61



# Safety Instructions

## ■ Before You Begin

Before handling the product, read the instructions and safety guidelines on the following pages to prevent damage to the product and to ensure your own personal safety. Refer to the “Advisories” section in the Preface for advisory conventions used in this user’s guide, including the distinction between Warnings, Cautions, Important Notes, and Notes.

- Always use caution when handling/operating a computer. Only qualified, experienced, authorized electronics service personnel should access the interior of a computer. The power supplies produce high voltages and energy hazards, which can cause bodily harm.
- Use extreme caution when installing or removing components. Refer to the installation instructions in this user’s guide for precautions and procedures. If you have any questions, please contact Quanmax Post-Sales Technical Support.

---

### WARNING



High voltages are present inside the chassis when the unit’s power cord is plugged into an electrical outlet. Turn off system power, turn off the power supply, and then disconnect the power cord from its source before removing the chassis cover. Turning off the system power switch does not remove power to components.

---

## ■ When Working Inside a Computer

Before taking covers off a computer, perform the following steps:

1. Turn off the computer and any peripherals.
2. Disconnect the computer and peripherals from their power sources or subsystems to prevent electric shock or system board damage. This does not apply when hot swapping parts.

3. Follow the guidelines provided in “Preventing Electrostatic Discharge” on the following page.
4. Disconnect any telephone or telecommunications lines from the computer.

In addition, take note of these safety guidelines when appropriate:

- To help avoid possible damage to system boards, wait five seconds after turning off the computer before removing a component, removing a system board, or disconnecting a peripheral device from the computer.
- When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs. If you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before connecting a cable, make sure both connectors are correctly oriented and aligned.

---

### CAUTION



Do not attempt to service the system yourself except as explained in this user's guide. Follow installation and troubleshooting instructions closely.

---

## ■ Preventing Electrostatic Discharge

Static electricity can harm system boards. Perform service at an ESD workstation and follow proper ESD procedure to reduce the risk of damage to components. Quanmax strongly encourages you to follow proper ESD procedure, which can include wrist straps and smocks, when servicing equipment. You can also take the following steps to prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component's antistatic packing material until you are ready to install the component in a computer. Just before unwrapping the antistatic packaging, be sure you are at an ESD workstation or grounded. This will discharge any static electricity that may have built up in your body.
- When transporting a sensitive component, first place it in an antistatic container

or packaging.

- Handle all sensitive components at an ESD workstation. If possible, use antistatic floor pads and workbench pads.
- Handle components and boards with care. Don't touch the components or contacts on a board. Hold a board by its edges or by its metal mounting bracket.
- Do not handle or store system boards near strong electrostatic, electromagnetic, magnetic, or radioactive fields.

# Preface

## ■ How to Use This Guide

This guide is designed to be used as step-by-step instructions for installation, and as a reference for operation, troubleshooting, and upgrades.

---

### NOTE



Driver downloads and additional information are available under Downloads on our web site: [www.quanmax.com](http://www.quanmax.com).

---

## ■ Unpacking

When unpacking, follow these steps:

1. After opening the box, save it and the packing material for possible future shipment.
2. Remove all items from the box. If any items listed on the purchase order are missing, notify Quanmax customer service immediately.
3. Inspect the product for damage. If there is damage, notify Quanmax customer service immediately. Refer to “Warranty Policy” for the return procedure.

## ■ Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices.

### FCC Compliance Statement for Class A Devices

The product(s) described in this user's guide has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential

area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

Changes or modifications not expressly approved by Quanmax could void the user's authority to operate the equipment.

---

### NOTE



The assembler of a personal computer system may be required to test the system and/or make necessary modifications if a system is found to cause harmful interference or to be noncompliant with the appropriate standards for its intended use.

---

## ■ Warranty Policy

### Limited Warranty

Quanmax Inc.'s detailed Limited Warranty policy can be found under Support at [www.quanmax.com](http://www.quanmax.com). Please consult your distributor for warranty verification.

The limited warranty is void if the product has been subjected to alteration, neglect, misuse, or abuse; if any repairs have been attempted by anyone other than Quanmax or its authorized agent; or if the failure is caused by accident, acts of God, or other causes beyond the control of Quanmax or the manufacturer. Neglect, misuse, and abuse shall include any installation, operation, or maintenance of the product other than in accordance with the user's guide.

No agent, dealer, distributor, service company, or other party is authorized to change, modify, or extend the terms of this Limited Warranty in any manner whatsoever.

Quanmax reserves the right to make changes or improvements in any product without incurring any obligation to similarly alter products previously purchased.

### Return Procedure

For any Limited Warranty return, please contact Support at [www.quanmax.com](http://www.quanmax.com) and login to obtain a Return Material Authorization (RMA) Number. If you do not have an account, send an email to [support@quanmax.com](mailto:support@quanmax.com) to apply for one.

All product(s) returned to Quanmax for service or credit must be accompanied by a Return Material Authorization (RMA) Number. Freight on all returned items must be prepaid by the customer who is responsible for any loss or damage caused by common carrier in transit. Returns for Warranty must include a Failure Report for each unit, by serial number(s), as well as a copy of the original invoice showing the

date of purchase.

To reduce risk of damage, returns of product must be in a Quanmax shipping container. If the original container has been lost or damaged, new shipping containers may be obtained from Quanmax Customer Service at a nominal cost. Quanmax owns all parts removed from repaired products. Quanmax uses new and reconditioned parts made by various manufacturers in performing warranty repairs and building replacement products. If Quanmax repairs or replaces a product, its warranty term is not extended.

Shipments not in compliance with this Limited Warranty Return Policy will not be accepted by Quanmax.

### **Limitation of Liability**

In no event shall Quanmax be liable for any defect in hardware, software, loss, or inadequacy of data of any kind, or for any direct, indirect, incidental, or consequential damages in connection with or arising out of the performance or use of any product furnished hereunder. Quanmax's liability shall in no event exceed the purchase price of the product purchased hereunder. The foregoing limitation of liability shall be equally applicable to any service provided by Quanmax or its authorized agent.

## **■ Maintaining Your Computer**

### **Environmental Factors**

#### **■ Temperature**

The ambient temperature within an enclosure may be greater than room ambient temperature. Installation in an enclosure should be such that the amount of air flow required for safe operation is not compromised.

Consideration should be given to the maximum rated ambient temperature.

Overheating can cause a variety of problems, including premature aging and failure of chips or mechanical failure of devices.

If the system has been exposed to abnormally cold temperatures, allow a two-hour warm-up period to bring it up to normal operating temperature before turning it on. Failure to do so may cause damage to internal components, particularly the hard disk drive.

#### **■ Humidity**

High-humidity can cause moisture to enter and accumulate in the system. This moisture can cause corrosion of internal components and degrade such

properties as electrical resistance and thermal conductivity. Extreme moisture buildup inside the system can result in electrical shorts, which can cause serious damage to the system.

Buildings in which climate is controlled usually maintain an acceptable level of humidity for system equipment. However, if a system is located in an unusually humid location, a dehumidifier can be used to maintain the humidity within an acceptable range. Refer to the “Specifications” section of this user’s guide for the operating and storage humidity specifications.

### ■ **Altitude**

Operating a system at a high altitude (low pressure) reduces the efficiency of the cooling fans to cool the system. This can cause electrical problems related to arcing and corona effects. This condition can also cause sealed components with internal pressure, such as electrolytic capacitors, to fail or perform at reduced efficiency.

## **Power Protection**

The greatest threats to a system’s supply of power are power loss, power spikes, and power surges caused by electrical storms, which interrupt system operation and/or damage system components. To protect your system, always properly ground power cables and one of the following devices.

### ■ **Surge Protector**

Surge protectors are available in a variety of types and usually provide a level of protection proportional with the cost of the device. Surge protectors prevent voltage spikes from entering a system through the AC power cord. Surge protectors, however, do not offer protection against brownouts, which occur when the voltage drops more than 20 percent below the normal AC line voltage level.

### ■ **Line Conditioner**

Line conditioners go beyond the over voltage protection of surge protectors. Line conditioners keep a system’s AC power source voltage at a fairly constant level and, therefore, can handle brownouts. Because of this added protection, line conditioners cost more than surge protectors. However, line conditioners cannot protect against a complete loss of power.



■ **Uninterruptible Power Supply**

Uninterruptible power supply (UPS) systems offer the most complete protection against variations on power because they use battery power to keep the server running when AC power is lost. The battery is charged by the AC power while it is available, so when AC power is lost, the battery can provide power to the system for a limited amount of time, depending on the UPS system.

UPS systems range in price from a few hundred dollars to several thousand dollars, with the more expensive units allowing you to run larger systems for a longer period of time when AC power is lost. UPS systems that provide only 5 minutes of battery power let you conduct an orderly shutdown of the system, but are not intended to provide continued operation. Surge protectors should be used with all UPS systems, and the UPS system should be Underwriters Laboratories (UL) safety approved.

# Chapter 1

## Introduction

### ■ Overview

The KEMX-600A is a Mini-ITX form factor wide temperature industrial motherboard combining the latest 2nd generation Intel® Core™ i3/i5/i7 processors with the high integration of the Intel® QM67 chipset. Featured are DDR3 1066/1333 SO-DIMM up to 16GB, 24-bit LVDS, HDMI, DVI-D, VGA, 2x Gigabit Ethernet, 5x SATA, 1x PCIe x 16, mini PCIe Expansion slot, 2x USB 3.0, 8x USB 2.0, 6x COM ports with Power Selection, HD audio, keyboard/mouse and CompactFlash.

The KEMX-600A is a compact, high performance industrial motherboard that is ideal for a variety of applications.

### Checklist

- Driver/ Manual CD
- Quick Installation Guide
- I/O Shield
- KEMX-600A Mini-ITX main board
- SATA cable (7-pin connector with lock, L=46cm)
- COM cable

### Features

- 2nd Generation Intel® Core™ i3/i5/i7 Processors
- Intel® QM67Express Chipset
- 1x VGA, 1x DVI-D, 1x HDMI, and 2x 24-bit dual-channel LVDS
- 2x Dual Channel DDR3 SO-DIMM Socket, total up to 16 GB
- 1x PCIe x16 slot, 2x Mini PCIe, 1x Compact Flash Socket
- 5x SATA, 2x USB 3.0, 8x USB 2.0, 6 x COM Ports
- 2x GbE, iAMT 7.0 supported
- Watchdog Timer, Hardware Monitor
- Wide operating temperature range: -20°C ~ 70°C

## ■ Product Specifications

Model Name	KEMX-600A
CPU Support	2nd Generation Intel® Core™ i3/i5/i7 Processors
Chipset	Intel® QM67 Express Chipset
Memory	2x DDR3 1066/1333 SO-DIMM Socket, up to 16GB
BIOS	AMI PnP Flash BIOS iAMT7.0 supported
Display	Sandy Bridge Integrated graphics core. Display from Cougar Point 1x DB-15 connector 1x DVI-D connector 1x HDMI connector 2x SPWG connectors for 2x LVDS supported LVDS backlight control supported
LAN	2x RJ-45, Gigabit Ethernet Intel® GbE PHY 82579 and 82574 GbE controller
Audio	Realtek ALC888 HD audio codec. 1x audio stack connector for Line-Out, Line-In and Mic-In 1x S/PDIF connector on rear I/O for S/PDIF out supported 1x header for front panel audio supported 2x audio amplifier onboard 2x connectors for Right/Left speaker out
Peripheral Support	Storage supported 4x SATA connectors supported Raid 0/1/5/10 supported 1x CF socket supported 2x USB3.0 ports support 2x ports stack with two RJ-45 connectors 8x USB2.0 ports support 2x ports stack with two RJ-45 connectors 6x ports via 4x headers for internal. 1x header for 8-bits DIO supported 4-bits Input and 4-bits Output 1x wafer connector for PS/2 Keyboard/Mouse 6x COM ports supported 2x DB-9 male connectors for COM1, COM2

	<p>COM1 &amp; COM2 with RS-232/422/485 supported</p> <p>4x headers for COM3 ~ COM6</p> <p>COM3 &amp; COM4 with +12V &amp; +5V supported, select by jumper</p> <p>COM5 &amp; COM6 with RS-232 only</p> <p>1x header for IrDA supported</p> <p>Buzzer onboard</p> <p>TPM1.2 supported</p> <p>2x fans supported</p> <p>1x 3-pin FAN for CPU</p> <p>1x 3-pin FAN for system</p> <p>Fans speed control supported</p>
Power	<p>1x ATX-24P for power input</p> <p>1x ATX-4P for CPU core power</p> <p>AT/ATX supported</p>
Battery	<p>1x vertical battery socket</p> <p>Lithium, 3V</p>
ACPI	ACPI supported
Expansion	<p>2x Mini PCIe slots supported</p> <p>1x 2G/3G SIM card module supported</p> <p>1x PCIe16 slot supported</p>
Watchdog Timer	1-255 step
Hardware Monitor	<p>Supply voltages detection</p> <p>CPU and system temperature detection</p> <p>CPU and system fan speed detection</p>
Dimensions	Mini-ITX (170 x 170 mm)
Environmental Factors	<p>Operation Temp: -20°C - 70°C</p> <p>Storage Temp.: -40°C - 85°C</p> <p>Humidity: 0% - 90%</p>
Certifications	CE, FCC Class A

Table 1 KEMX-600A Specification

## ■ System Block Diagram


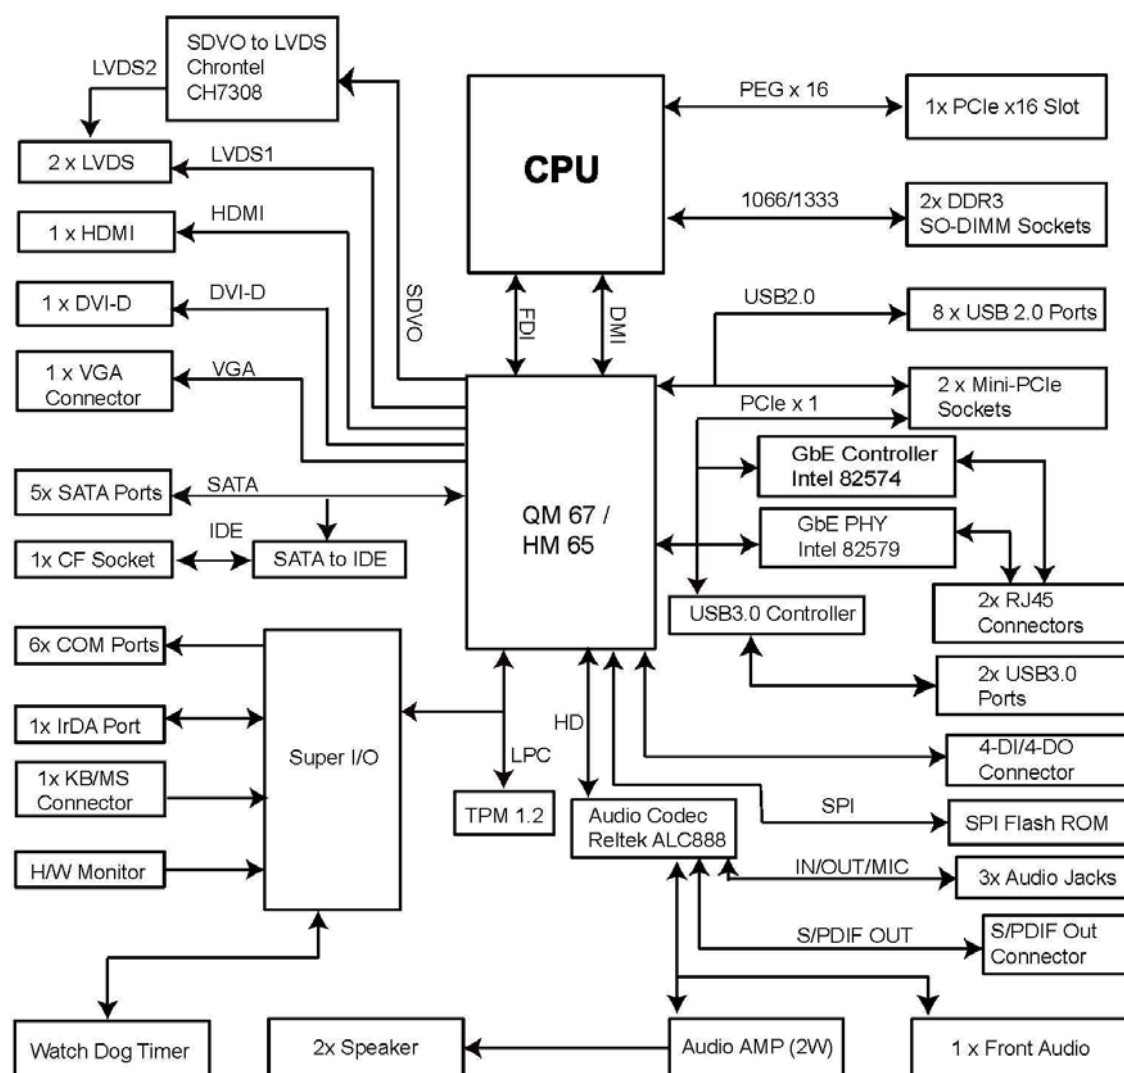


Figure 1 Block Diagram

## ■ Mechanical Dimensions

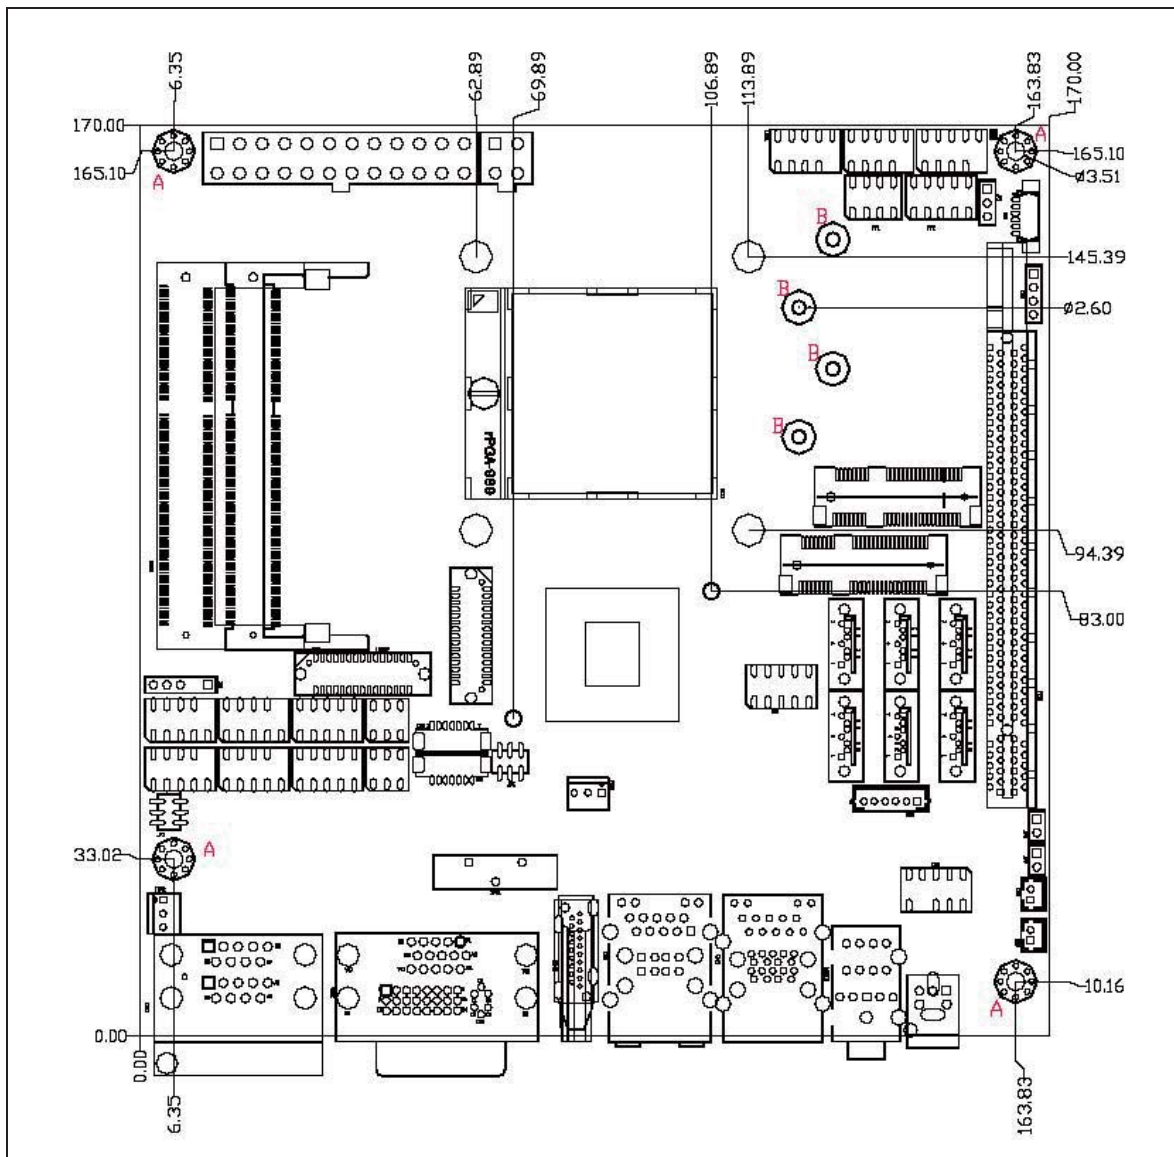

\*A- $\varnothing$ : 3.51mm    \*B- $\varnothing$ : 2.6mm

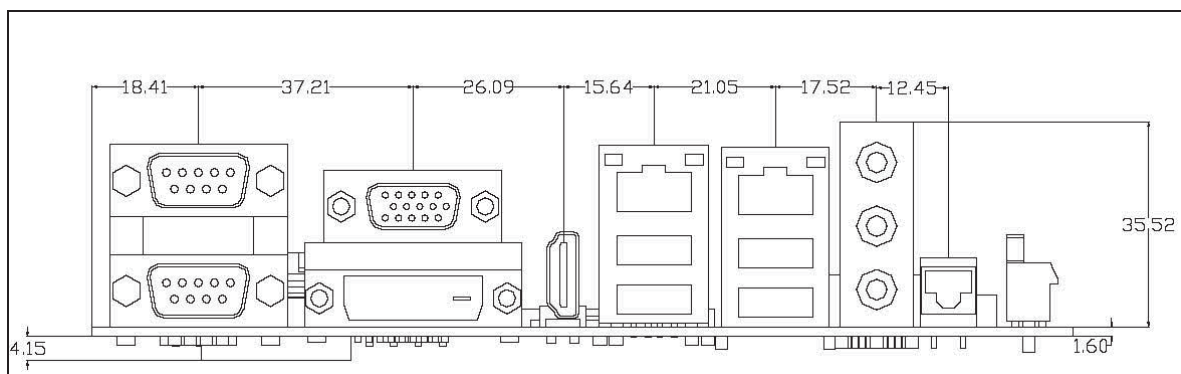


Figure 2 Mechanical Dimensions

## Chapter 2


# Hardware Settings

### ■ Overview

This chapter provides the definitions and locations of jumpers, headers, and connectors.

### Jumpers

The product has several jumpers which must be properly configured to ensure correct operation.

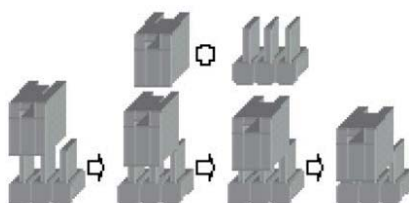

*Figure 3 Jumper Connector*


For a three-pin jumper (see *Figure 3*), the jumper setting is designated “1-2” when the jumper connects pins 1 and 2. The jumper setting is designated “2-3” when pins 2 and 3 are connected and so on. You will see that one of the lines surrounding a jumper pin is thick, which indicates pin No.1.


To move a jumper from one position to another, use needle-nose pliers or tweezers to pull the pin cap off the pins and move it to the desired position.



## ■ Jumper Settings and Pin Definitions

For jumper and connector locations, please refer to the diagrams below.

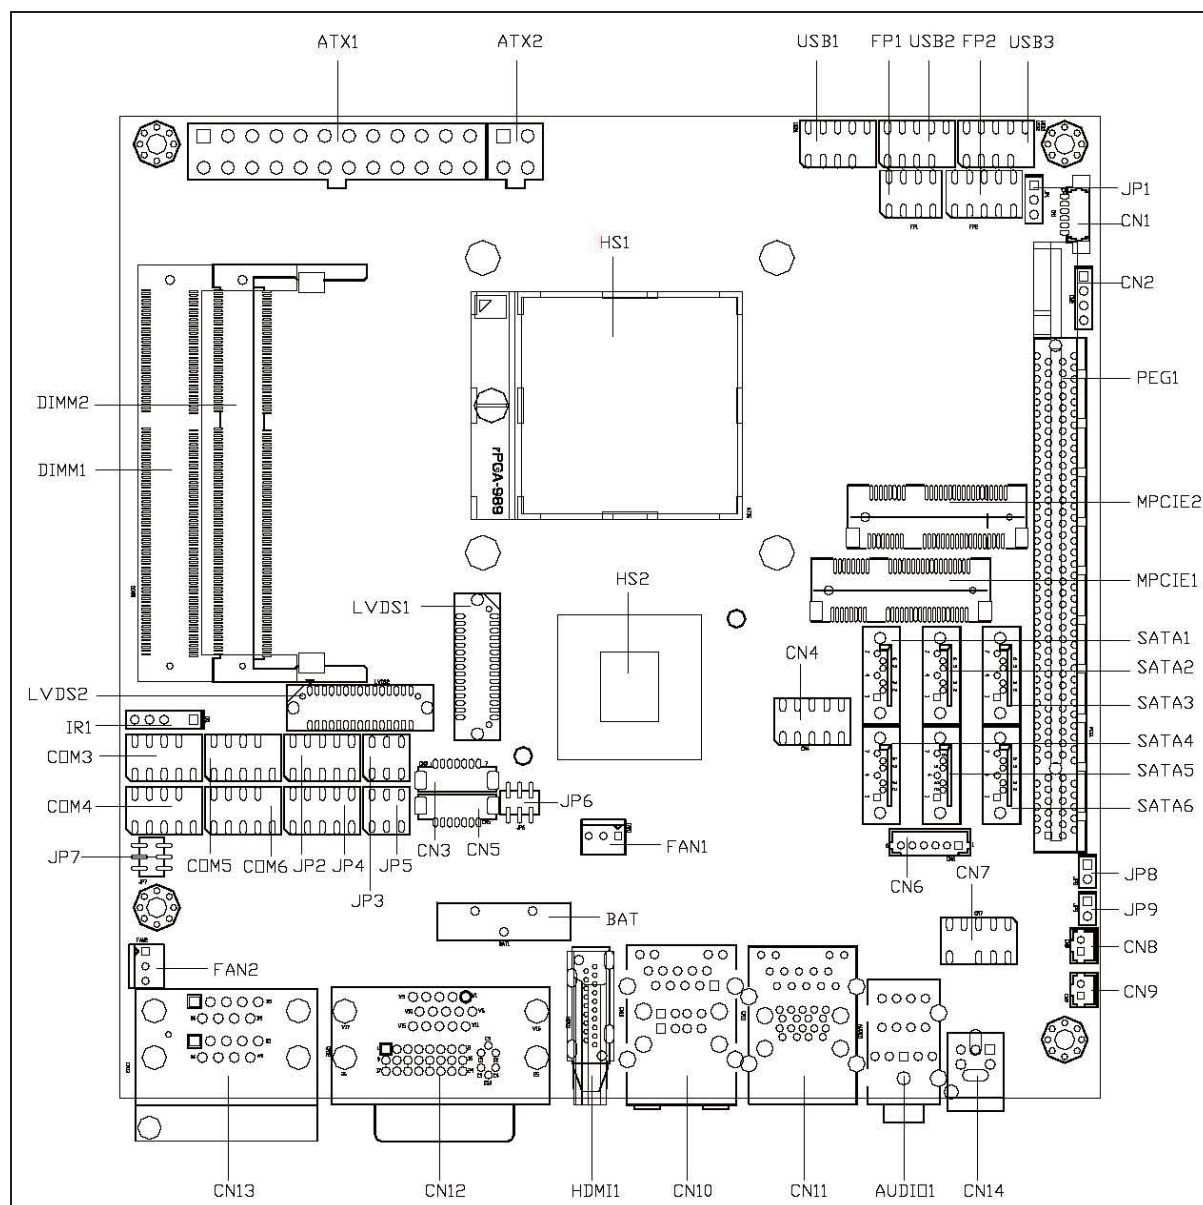

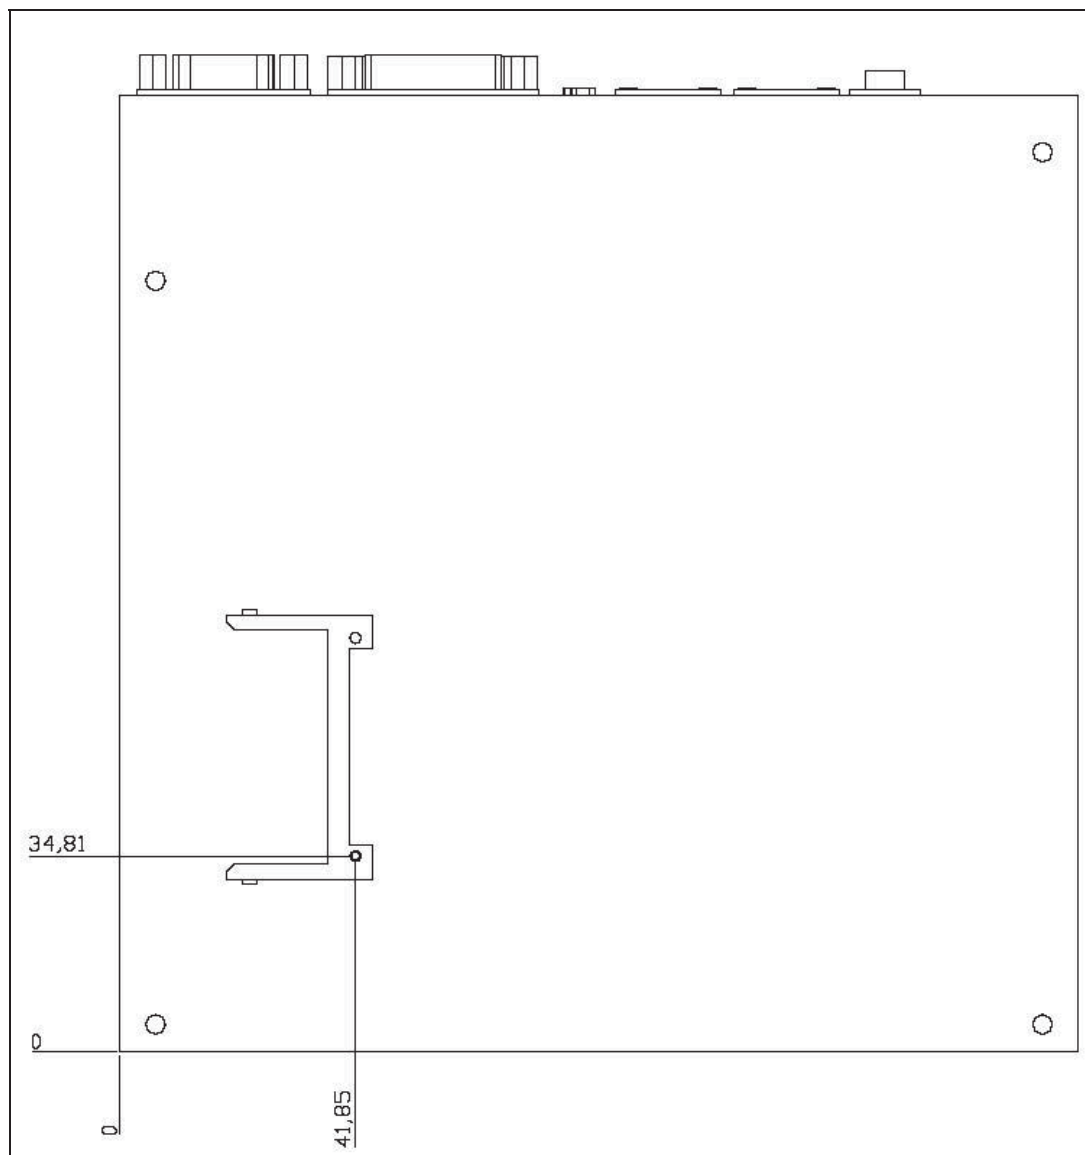

*Figure 4 Jumper and Connector Locations*


## Jumper Settings

To ensure correct system configuration, the following section describes how to set the jumpers to enable/disable or change functions. For jumper descriptions, please refer to the table below.

Table 2 Jumper List


Label	Function
JP1	AT / ATX Mode Selection
JP2	Signal / Power Selection for COM5
JP3	Panel & Backlight Power Selection for LVDS2
JP4	Signal / Power Selection for COM6
JP5	Panel & Backlight Power Selection for LVDS1
JP6	Backlight Power Enable Selection for LVDS1
JP7	Backlight Power Enable Selection for LVDS2
JP8	RTC Reset Selection
JP9	SRTC Reset Selection
JP11	Flash Description Security Over-ride

 Table 3 JP1 AT / ATX Mode Selection




Jumper	Status
1-2 Short	ATX Mode
2-3 Short	AT Mode
<b>Pitch: 2.54mm [YIMTEX3321*02SAGR (6T)]</b>	

Table 4 JP2 Signal / Power Selection for COM5

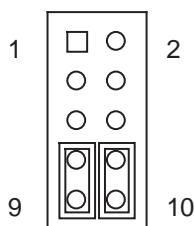


Jumper	Setting	Function
1	1-3 Short	Pin 1 = +12V
	3-5 Short	Pin 1 = +5V
	5-7 Short	Pin 1 = +5V
	7-9 Short	Pin 1 = DCD
2	2-4 Short	Pin 9 = +12V
	4-6 Short	Pin 9 = +5V
	6-8 Short	Pin 9 = +5V
	8-10 Short	Pin 9 = RI
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR]</b>		

Table 5 JP3 Panel Backlight Power Selection for LVDS2

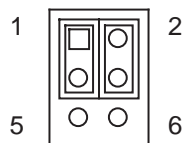


Jumper	Setting	Status
1	1-3	Backlight Power = +12V
	3-5	Backlight Power = +5V
2	2-4	Panel Power = +3.3V
	4-6	Panel Power = +5V
<b>Pitch: 2.54mm [YIMTEX 3362*03SAGR]</b>		

Table 6 JP4 Signal / Power Selection for COM6

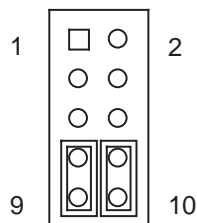


Jumper	Setting	Function
1	1-3 Short	Pin 1 = +12V
	3-5 Short	Pin 1 = +5V
	5-7 Short	Pin 1 = +5V
	7-9 Short	Pin 1 = DCD
2	2-4 Short	Pin 9 = +12V
	4-6 Short	Pin 9 = +5V
	6-8 Short	Pin 9 = +5V
	8-10 Short	Pin 9 = RI
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR]</b>		

Table 7 JP5 Panel Backlight Power Selection for LVDS1

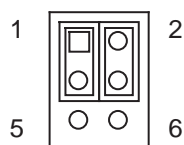

Jumper	Setting	Status
1	1-3	Backlight Power = +12V
	3-5	Backlight Power = +5V
2	2-4	Panel Power = +3.3V
	4-6	Panel Power = +5V
<b>Pitch: 2.54mm [YIMTEX 3362*03SAGR]</b>		

Table 8 JP6 Backlight Power Enable Selection for LVDS1

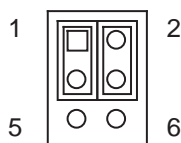

Jumper	Setting	Status
1	1-3	Backlight <i>Enable</i> Voltage = +3.3V
	3-5	Backlight <i>Enable</i> Voltage = +5V
2	2-4	Active High
	4-6	Active Low
<b>Pitch: 2.0mm [PINREX 222-97-03GBB1]</b>		

Table 9 JP7 Backlight Power Enable Selection for LVDS2

 

1		2	Jumper	Setting	Status
			1	1-3 3-5	Backlight <i>Enable</i> Voltage = +3.3V Backlight <i>Enable</i> Voltage = +5V
5		6	2	2-4 4-6	Active High Active Low
			<b>Pitch: 2.0mm[PINREX 222-97-03GBB1]</b>		

Table 10 JP8 RTC Reset Selection


1		Jumper	Status
		1-2 Open	Normal Operation
2		1-2 Short	Clear RTC CMOS
<b>Pitch: 2.54mm [YIMTEX 3321*02SAGR (6T)]</b>			

Table 11 JP9 SRTC Reset Selection



1		Jumper	Status
		1-2 Open	Normal Operation
2		1-2 Short	Clear ME Registers
<b>Pitch: 2.54mm [YIMTEX 3321*02SAGR (6T)]</b>			

Table 12 JP11 Flash Description Security Over-ride

1		Jumper	Status
		1-2 Open	Disable
2		2-3 Short	Enable
<b>Pitch: 2.54mm [YIMTEX 3321*03SAGR (6T)]</b>			

## Rear Panel Pin Assignments

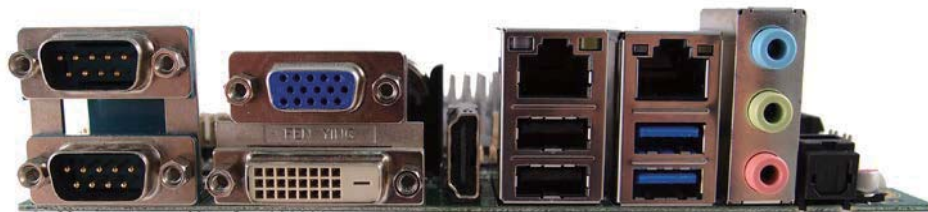


Figure 5 Rear Panel IO


Table 13 Rear Panel Connector List

Label	Function
AUDIO1	3 Stack-up Azalia Audio Phone Jack
CN10	LAN1 & USB2.0 Port 0,1 Connector
CN11	LAN2 & USB2.0 Port 2,3 Connector
CN12	CRT DB-15 & DVI-D Connector
CN13	RS-232 / 422 / 485 Port 1, 2 Connector
CN14	Optical S/PDIF Output Connector
HDMI1	HDMI Connector

Table 14 AUDIO1, 3 Stack-up Azalia Audio Phone Jack


	Signal Name
BLUE	LINE IN
GREEN	LINE OUT
PINK	MIC IN
[Foxconn JA33331-H11P-4F]	

Table 15 CN10 LAN1 &amp; USB2.0 Port 0, 1 Connector

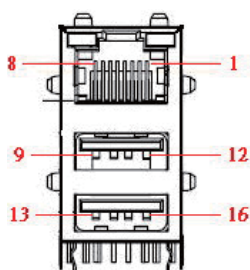

Pin	Signal	Pin	Signal
1	MDI[0]+	9	+USBVCC
2	MDI[0]-	10	USB_A-
3	MDI[1]+	11	USB_A+
4	MDI[1]-	12	GND
5	MDI[2]+	13	+USBVCC
6	MDI[2]-	14	USB_B-
7	MDI[3]+	15	USB_B+
8	MDI[3]-	16	GND
[UDE RU1-161F9WGF (XB)]			

Table 16 CN11 LAN2 &amp; USB2.0 Port 2,3 Connector

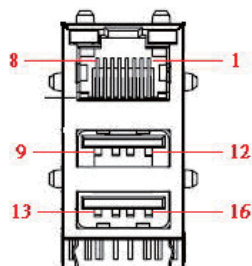


Pin	Signal	Pin	Signal
1	MDI[0]+	9	+USBVCC
2	MDI[0]-	10	USB_A-
3	MDI[1]+	11	USB_A+
4	MDI[1]-	12	GND
5	MDI[2]+	13	+USBVCC
6	MDI[2]-	14	USB_B-
7	MDI[3]+	15	USB_B+
8	MDI[3]-	16	GND

**[UDE RU1-161F9WGF (XB)]**

Note : LAN LED Configuration

- Left (Link) LED : Green / Orange  
 Link 1000 → Orange LED on  
 Link 100 → Green LED on  
 Link 10 or No Link → LED off
- Right (Active) LED : Yellow  
 Activity → Yellow LED blink

Table 17 CN12 CRT DB-15 &amp; DVI-D Connector

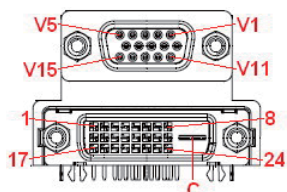


Signal Name	Pin	Pin	Signal Name
Red	V1	V2	Green
Blue	V3	V4	NC
GND	V5	V6	GND
GND	V7	V8	GND
+5V	V9	V10	GND
NC	V11	V12	DDC_DATA
HSYNC	V13	V14	VSYNC
DDC_CLK	V15		
Signal Name	Pin	Pin	Signal Name
TX2-	1	2	TX2+
GND	3	4	NC
NC	5	6	DDC_CLK
DDC_DATA	7	8	NC
TX1-	9	10	TX1+
GND	11	12	NC
NC	13	14	+5V
GND	15	16	HTPLG
TX0-	17	18	TX0+
GND	19	20	NC
NC	21	22	GND
TXC+	23	24	TXC-
GND	C		

**[FAN YING G205D2C01012PHN]**



Table 18 CN13 RS-232 / 422 / 485 Port 1, 2 Connector

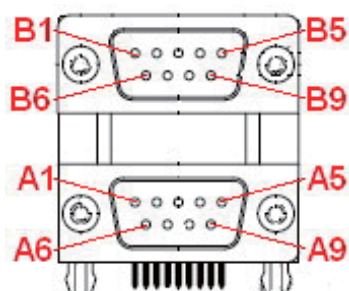


Port	Pin	RS-232	RS-422	Half Duplex RS-485	Full Duplex RS-485
1	B1	DCD	TX-	DATA-	TX-
	B2	RXD	RX+	NA	RX+
	B3	TXD	TX+	DATA+	TX+
	B4	DTR	RX-	NA	RX-
	B5	GND	GND	GND	GND
	B6	DSR	NA	NA	NA
	B7	RTS	NA	NA	NA
	B8	CTS	NA	NA	NA
	B9	RI	NA	NA	NA
Port	Pin	RS-232	RS-422	Half Duplex RS-485	Full Duplex RS-485
2	A1	DCD	TX-	DATA-	TX-
	A2	RXD	RX+	NA	RX+
	A3	TXD	TX+	DATA+	TX+
	A4	DTR	RX-	NA	RX-
	A5	GND	GND	GND	GND
	A6	DSR	NA	NA	NA
	A7	RTS	NA	NA	NA
	A8	CTS	NA	NA	NA
	A9	RI	NA	NA	NA

[FAN YING D20HB1102112PN]

Note : RS-232 / 422 / 485 can be selected in BIOS setup.


Table 19 HDMI Connector

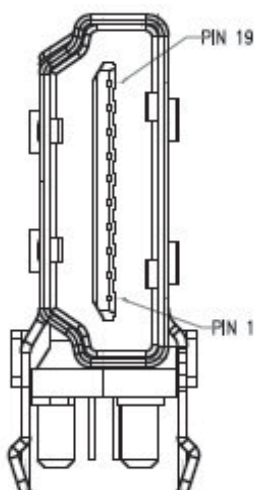

Pin	Signal
1	TMDS Data2+
2	Ground
3	TMDS Data2-
4	TMDS Data1+
5	Ground
6	TMDS Data1-
7	TMDS Data0+
8	Ground
9	TMDS Data0-
10	TMDS Clock+
11	Ground
12	TMDS Clock-
13	Reserved
14	Reserved
15	DDC_CLK
16	DDC_DATA
17	Ground
18	+5 V Power
19	Hot Plug Detect
[ARGOSY HDMIV-A1915-DK2R]	

## Main Board Pin Assignments

 Table 20 ATX1 24-pin ATX Power Input Connector




Pin	Signal	Pin	Signal
1	+3.3V	13	+3.3V
2	+3.3V	14	NC
3	GND	15	GND
4	+5V	16	PS_ON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	POWER OK	20	NC
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND
Pitch: 4.2mm [YIMTEX 576MWA2*12STR]			

Table 21 ATX 4-pin ATX Power Input Connector



Pin	Signal Name
1	GND
2	GND
3	+12V
4	+12V
Pitch: 4.2mm[YIMTEX576MWA2*02STR]	


Table 22 CFD1 CF Type II Connector

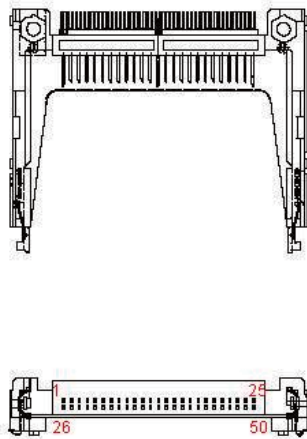

Signal Name	Pin	Pin	Signal Name
GND	1	26	GND
IDE Data 3	2	27	IDE Data 11
IDE Data 4	3	28	IDE Data 12
IDE Data 5	4	29	IDE Data 13
IDE Data 6	5	30	IDE Data 14
IDE Data 7	6	31	IDE Data 15
IDE Chip select 1#	7	32	IDE Chip select 3#
GND	8	33	GND
GND	9	34	IDEIOR#
GND	10	35	IDEIOW#
GND	11	36	+5V
GND	12	37	IDEIRQ
+5V	13	38	+5V
GND	14	39	PCSEL
GND	15	40	NC
GND	16	41	Reset IDE
GND	17	42	IDEIORDY
SDA2	18	43	DREQ
IDE Address 1	19	44	DACK#
IDE Address 0	20	45	IDE activity
IDE Data 0	21	46	PDIAG#
IDE Data 1	22	47	IDE Data 8
IDE Data 2	23	48	IDE Data 9
IOIS16#	24	49	IDE Data 10
GND	25	50	GND

[SUNLIT 60303020]

Table 23 COM3 RS-232 Port 3 Pin Header

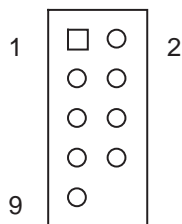

Pin	Signal
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator
10	NC, Key

Pitch: 2.54mm [YIMTEX 3362\*05SANGR-10]

Table 24 COM4 RS-232 Port 4 Pin Header

Pin	Signal
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator
10	NC, Key
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-10]</b>	

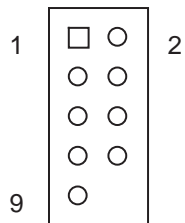


Table 25 COM5 RS-232 Port 5 Pin Header

Pin	Signal
1	DCD, Data carrier detect/ +12V / +5V *
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator/ +12V / +5V *
10	NC, Key
<b>Pitch: 2.54mm [YIMTEX3362*05SANGR-10]</b>	
<b>* : Selected by JP2</b>	

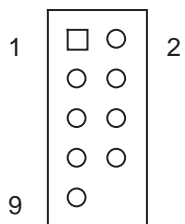


Table 26 COM6 RS-232 Port 6 Pin Header

Pin	Signal
1	DCD, Data carrier detect/ +12V / +5V *
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator/ +12V / +5V *
10	NC, Key
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-10]</b>	
<b>* : Selected by JP4</b>	

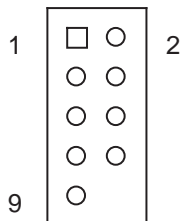


Table 27 CN1 SIM Interface Wafer for MPCIE1

Pin	Signal Name
1	UIM_PWR
2	UIM_DATA
3	UIM_RESET
4	UIM_VPP
5	UIM_CLK
6	GND
<b>Pitch: 1.27mm [Pinrex 712-73-06TWB0]</b>	

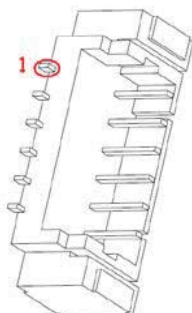


Table 28 CN2 MPCIE Activity Indication Pin Header

Pin	Signal Name
1	MPCIE1_ACT+
2	MPCIE1_ACT-
3	MPCIE2_ACT+
4	MPCIE2_ACT-
<b>Pitch: 2.54mm [YIMTEX 3321*04SAGR (6T)]</b>	


 



Table 29 CN3 Panel Backlight Wafer for LVDS2

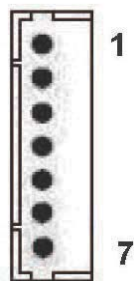

Pin	Signal Name
1	NC
2	BL_ADJ *
3	GND
4	+5V / +12V **
5	+5V / +12V **
6	GND
7	BL_EN***

**Pitch: 1.25mm [Townes Enterprise 1250W-07T1-V]**  
**\* : BL\_ADJ can be setting from 0V to 5V in BIOS setup.**  
**\*\* : Backlight Power can be selected by JP3.**  
**\*\*\* : BL\_EN can be selected by JP7.**

 
Table 30 CN4 Digital Input / Output Pin Header



Pin	Signal	Pin	Signal
1	Digital Output 0	2	Digital Input 0
3	Digital Output 1	4	Digital Input 1
5	Digital Output 2	6	Digital Input 2
7	Digital Output 3	8	Digital Input 3
9	+5V	10	GND

**Pitch: 2.54mm [YIMTEX 3362\*05SANGR]**


Table 31 CN5 Panel Backlight Wafer for LVDS1

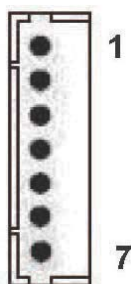

Pin	Signal Name
1	NC
2	BL_ADJ *
3	GND
4	+5V / +12V **
5	+5V / +12V **
6	GND
7	BL_EN***


**Pitch: 1.25mm [Townes Enterprise 1250W-07T1-V]**  
**\* : BL\_ADJ can be setting from 0V to 5V in BIOS setup.**  
**\*\* : Backlight Power can be selected by JP5.**  
**\*\*\* : BL\_EN can be selected by JP6**

 Table 32 CN6 Keyboard &amp; Mouse Wafer




Pin	Signal Name
1	MSCLK
2	VCC
3	MSDAT*
4	KBDAT
5	GND
6	KBCLK
<b>Pitch: 2.0mm [STM M24266]</b>	

Table 33 CN7 Azalia Front Audio Pin Header

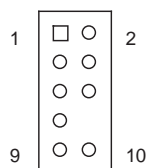


Pin	Signal	Pin	Signal
1	MIC2-L	2	Audio GND
3	MIC2-R	4	Audio GND
5	Line2-R	6	MIC2_JD
7	Audio GND	8	Key
9	Line2-L	10	Line2_JD
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-08]</b>			

 Table 34 CN8 Right Channel 2W Audio AMP Output Wafer



Pin	Signal Name
1	Speaker+
2	Speaker-
<b>Pitch: 2.0mm [YIMTEX 503PW1*02STR]</b>	

 Table 35 CN9 Left Channel 2W Audio AMP Output Wafer



Pin	Signal Name
1	Speaker+
2	Speaker-
<b>Pitch: 2.0mm [YIMTEX 503PW1*02STR]</b>	

Table 36 DIMM1 Primary DDR3 Memory SO-DIMM Socket


Height: 9.2mm [ARGOSY DDRSK-20401-TP9D]

Table 37 DIMM2 Secondary DDR3 Memory SO-DIMM Socket

Height: 5.2mm [ARGOSY DDRSK-20401-TP5B]




Table 38 FAN1 PU FAN Wafer

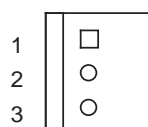


Pin	Signal
1	GND
2	+12V*
3	FAN_RPM
<b>Pitch: 2.54mm [YIMTEX 521AW1*03STR]</b>	
<b>*PWM Fan control supported</b>	

Table 39 System FAN Wafer

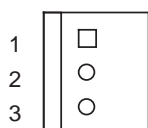


Pin	Signal
1	GND
2	+12V*
3	FAN_RPM
<b>Pitch: 2.54mm [YIMTEX 521AW1*03STR]</b>	
<b>*PWM Fan control supported</b>	

Table 40 FP1 Front Panel 1 Pin Header

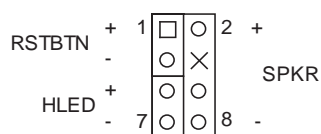


Pin	Signal	Pin	Signal
1	Reset Button +	2	Speaker +
3	Reset Button -	4	NC
5	HDD LED +	6	Internal Speaker-
7	HDD LED -	8	Speaker -
<b>Pitch: 2.54mm [YIMTEX 3362*04SANGR]</b>			
<b>Note : Internal Buzzer is enabled when Pin6-8 is shorted</b>			

Table 41 FP2 Front Panel 2 Pin Heade

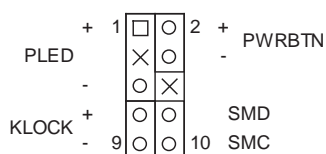


Pin	Signal	Pin	Signal
1	Power LED +	2	Power Button +
3	NC	4	Power Button -
5	Power LED -	6	NC
7	Keyboard Lock	8	SMBus Data
9	GND	10	SMBus Clock
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR]</b>			

 Table 42 IR1 IrDA Pin Header



Pin	Signal Name
1	+5V
2	Key
3	IR_Rx
4	GND
5	IR_Tx
<b>Pitch: 2.54mm [YIMTEX 3321*05SAGR (6T)-02]</b>	

Table 43 LVDS1 Primary 24-bit, 2-channel LVDS Panel Connector

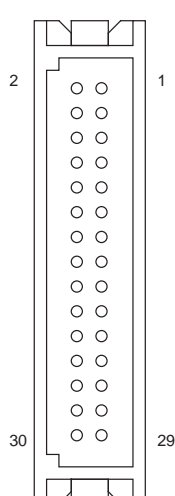


Signal Name	Pin	Pin	Signal Name
GND	2	1	VDD_EN
+3.3V / +5V*	4	3	+3.3V / +5V*
TxclkB-	6	5	TxclkA-
TxclkB+	8	7	TxclkA+
GND	10	9	GND
TxoutB0-	12	11	TxoutA0-
TxoutB0+	14	13	TxoutA0+
TxoutB1-	16	15	TxoutA1-
TxoutB1+	18	17	TxoutA1+
TxoutB2-	20	19	TxoutA2-
TxoutB2+	22	21	TxoutA2+
TxoutB3-	24	23	TxoutA3-
TxoutB3+	26	25	TxoutA3+
GND	28	27	GND
DDC_Clock	30	29	DDC_Data

**Pitch: 1.25mm [HIROSE DF13-30DP-1.25(24)]**

**\* : LVDS1 panel power can be selected by JP5**

Table 44 LVDS2 Secondary 24-bit, 2-channel LVDS Panel Connector

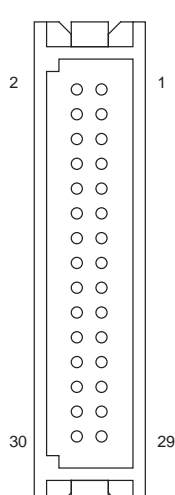


Signal Name	Pin	Pin	Signal Name
GND	2	1	VDD_EN
+3.3V / +5V*	4	3	+3.3V / +5V*
TxclkB-	6	5	TxclkA-
TxclkB+	8	7	TxclkA+
GND	10	9	GND
TxoutB0-	12	11	TxoutA0-
TxoutB0+	14	13	TxoutA0+
TxoutB1-	16	15	TxoutA1-
TxoutB1+	18	17	TxoutA1+
TxoutB2-	20	19	TxoutA2-
TxoutB2+	22	21	TxoutA2+
TxoutB3-	24	23	TxoutA3-
TxoutB3+	26	25	TxoutA3+
GND	28	27	GND
DDC_Clock	30	29	DDC_Data

**Pitch: 1.25mm [HIROSE DF13-30DP-1.25(24)]**


**\* : LVDS2 panel power can be selected by JP3.**

Table 45 PCIE1 Mini-PCIE Express v1.2 Socket 1

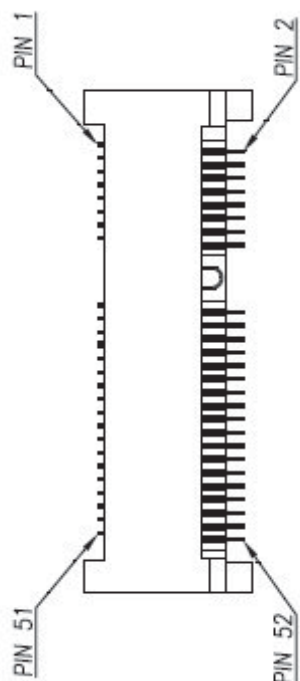

Signal	Pin	Pin	Signal
WAKE#	1	2	+3.3VSB
Reserved	3	4	Ground
Reserved	5	6	+1.5V
CLKREQ#	7	8	Reserved
Ground	9	10	Reserved
REFCLK-	11	12	Reserved
REFCLK+	13	14	Reserved
Ground	15	16	Reserved
LPC_CLK*	17	18	Reserved
LPC_FRAME#*	19	20	W_Disable#
Ground	21	22	PERST#
PERn0	23	24	+3.3VSB
PERp0	25	26	Ground
Ground	27	28	+1.5V
Ground	29	30	SMB_CLK
PETn0	31	32	SMB_DATA
PETp0	33	34	Ground
Ground	35	36	USB_D-
Ground	37	38	USB_D+
+3.3VSB	39	40	Ground
+3.3VSB	41	42	LED_WWAN#
Ground	43	44	LED_WLAN#
NC/ CL_CLK*	45	46	LED_WPAN#
NC/ CL_DATA*	47	48	+1.5V
NC/ CL_RST#*	49	50	Ground
Reserved	51	52	+3.3VSB
<b>Height: 9.0mm [ARGOSY MPCEC-S00F1-TP09]</b>			
<b>* (Default NC)</b>			

Table 46 PCIe2 Mini-PCIE Express v1.2 Socket 2

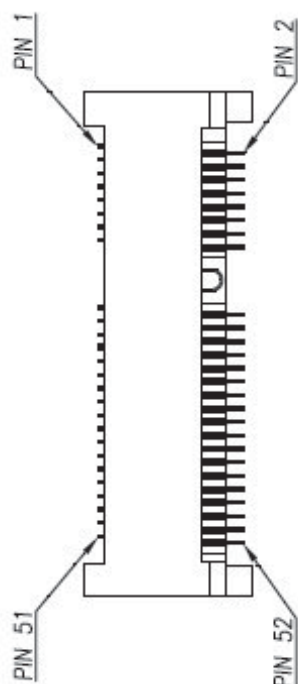

Signal	Pin	Pin	Signal
WAKE#	1	2	+3.3VSB
Reserved	3	4	Ground
Reserved	5	6	+1.5V
CLKREQ#	7	8	UIM_PWR**
Ground	9	10	UIM_DATA**
REFCLK-	11	12	UIM_CLK**
REFCLK+	13	14	UIM_RESET**
Ground	15	16	UIM_VPP**
Reserved	17	18	Ground
Reserved	19	20	W_Disable#
Ground	21	22	PERST#
PERn0	23	24	+3.3VSB
PERp0	25	26	Ground
Ground	27	28	+1.5V
Ground	29	30	SMB_CLK
PETn0	31	32	SMB_DATA
PETp0	33	34	Ground
Ground	35	36	USB_D-
Ground	37	38	USB_D+
+3.3VSB	39	40	Ground
+3.3VSB	41	42	LED_WWAN#
Ground	43	44	LED_WLAN#
NC/ LPC_AD0*	45	46	LED_WPAN#
NC/LPC_AD1*	47	48	+1.5V
NC/ LPC_AD2*	49	50	Ground
NC/ LPC_AD3*	51	52	+3.3VSB


**Height: 5.5mm [ARGOSY MPCEC-S00F1-TP03]**

**\* : These pins are connected to CN1 directly.**

**\* : Internal debug only, left these pins open.**

**(Default NC)**

Table 47 PEG1 PCIe Express x 16 Slot

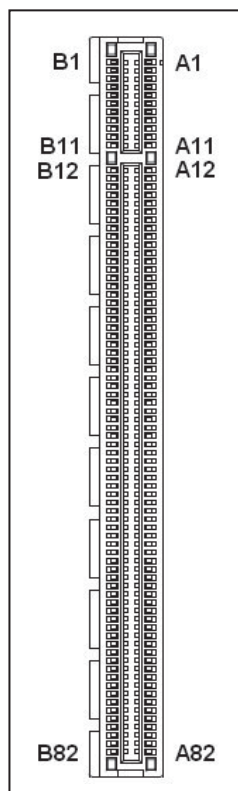


Pin	Side B	Side A
1	+12V	PRSNT1#
2	+12V	+12V
3	Reserved	+12V
4	Ground	Ground
5	SMCLK	Reserved
6	SMDAT	Reserved
7	Ground	Reserved
8	+3.3V	Reserved
9	Reserved	+3.3V
10	+3.3VSB	+3.3V
11	WAKE#	PERST#
12	Reserved	Ground
13	Ground	REFCLK+
14	HSOP0	REFCLK-
15	HSO0	Ground
16	Ground	HSIP0
17	PRSNT2#	HSIN0
18	Ground	Ground
19	HSOP1	Reserved
20	HSO1	Ground
21	Ground	HSIP1
22	Ground	HSIN1
23	HSOP2	Ground
24	HSO2	Ground
25	Ground	HSIP2
26	Ground	HSIN2
27	HSOP3	Ground
28	HSO3	Ground
29	Ground	HSIP3
30	Reserved	HSIN3
31	PRSNT2#	Ground
32	Ground	Reserved
33	HSOP4	Reserved
34	HSO4	Ground
35	Ground	HSIP4
36	Ground	HSIN4
37	HSOP5	Ground
38	HSO5	Ground
39	Ground	HSIP5
40	Ground	HSIN5
41	HSOP6	Ground

Pin	Side B	Side A
42	HSO6	Ground
43	Ground	HSIP6
44	Ground	HSIN6
45	HSOP7	Ground
46	HSO7	Ground
47	Ground	HSIP7
48	PRSNT2#	HSIN7
49	Ground	Ground
50	HSOP8	Reserved
51	HSO8	Ground
52	Ground	HSIP8
53	Ground	HSIN8
54	HSOP9	Ground
55	HSO9	Ground
56	Ground	HSIP9
57	Ground	HSIN9
58	HSOP10	Ground
59	HSO10	Ground
60	Ground	HSIP10
61	Ground	HSIN10
62	HSOP11	Ground
63	HSO11	Ground
64	Ground	HSIP11
65	Ground	HSIN11
66	HSOP12	Ground
67	HSO12	Ground
68	Ground	HSIP12
69	Ground	HSIN12
70	HSOP13	Ground
71	HSO13	Ground
72	Ground	HSIP13
73	Ground	HSIN13
74	HSOP14	Ground
75	HSO14	Ground
76	Ground	HSIP14
77	Ground	HSIN14
78	HSOP15	Ground
79	HSO15	Ground
80	Ground	HSIP15
81	PRSNT2#	HSIN15
82	Reserved	Ground

Pitch: 1.0mm [WIN WIN

WPCS-164AN41B22UWL]

Table 48 SATA1 Serial ATA Port0 Connector

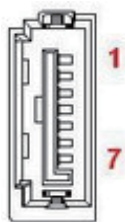

Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND
<b>[FOXCONN LD1807V-S52U]</b>	

Table 49 SATA2 Serial ATA Port1 Connector




Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND
<b>[FOXCONN LD1807V-S52U]</b>	

Table 50 SATA3 Serial ATA Port2 Connector



Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND
<b>[FOXCONN LD1807V-S52U]</b>	


Table 51 SATA4 Serial ATA Port3 Connector

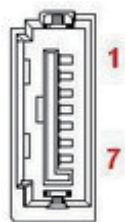

Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

[FOXCONN LD1807V-S52U]

Table 52 SATA5 Serial ATA Port4 Connector

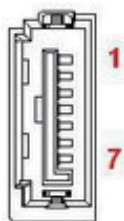

Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

[FOXCONN LD1807V-S52U]


Table 53 SATA6 Serial ATA Port5 Connector



Pin	Signal Name
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND


[FOXCONN LD1807V-S52U]

Table 54 USB1 USB2.0 Port 4, 5 Pin Header

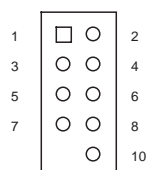


Pin	Signal Name	Pin	Signal Name
1	+USBVCC	2	+USBVCC
3	USB_A-	4	USB_B-
5	USB_A+	6	USB_B+
7	GND	8	GND
9	KEY	10	GND
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-09]</b>			

Table 55 USB2 USB2.0 Port 6, 7 Pin Header

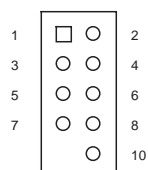

Pin	Signal Name	Pin	Signal Name
1	+USBVCC	2	+USBVCC
3	USB_A-	4	USB_B-
5	USB_A+	6	USB_B+
7	GND	8	GND
9	KEY	10	GND
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-09]</b>			

Table 56 USB3 USB2.0 Port 8, 9 Pin Header

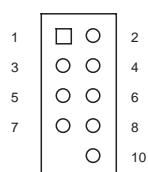

Pin	Signal Name	Pin	Signal Name
1	+USBVCC	2	+USBVCC
3	USB_A-	4	USB_B-
5	USB_A+	6	USB_B+
7	GND	8	GND
9	KEY	10	GND
<b>Pitch: 2.54mm [YIMTEX 3362*05SANGR-09]</b>			




## Chapter 3



# System Installation

### ■ Expansion Interfaces

mini PCIe x1 slot

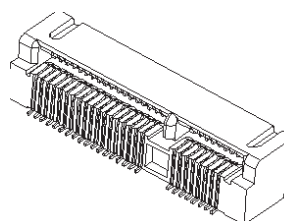

CF

 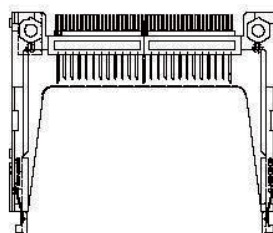

*Figure 6 Expansion Interfaces*

---

#### NOTE




When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

---

## ■ Memory Module Installation


**Carefully follow the steps below in order to install the SO-DIMMs:**

1. To avoid generating static electricity and damaging the SO-DIMM, ground yourself by touching a grounded metal surface or use a ground strap before you touch the SO-DIMM.
2. Do not touch the connectors of the SO-DIMM. Dirt or other residue may cause a malfunction.
3. Hold the SO-DIMM with its notch aligned with the memory socket of the board and insert it at a 30-degree angle into the socket.

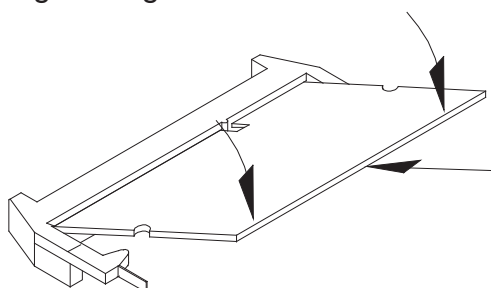

*Figure 7 Align the SO-DIMM Memory Module with the onboard socket*

4. Fully insert the module into the socket until a “click” is heard.
5. Press down on the SO-DIMM so that the tabs of the socket lock on both sides of the module

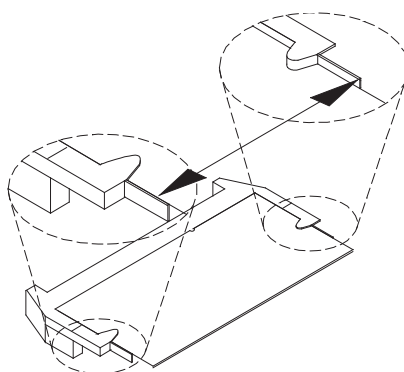

*Figure 8 Press down on the SO-DIMM Memory Module to lock it in place*

### **Removing a SO-DIMM:**

To remove the SO-DIMM, use your fingers or a small screwdriver to carefully push away the tabs that secure either side of the SO-DIMM. Lift it out of the socket. Make sure you store the SO-DIMM in an anti-static bag. The socket must be populated with memory modules of the same size and manufacturer.

## Chapter 4

# AMI BIOS Setup

### ■ Overview

This chapter provides a description of the AMI BIOS. The BIOS setup menus and available selections may vary from those of your product. For specific information on the BIOS for your product, please contact Quanmax.



**NOTE:** The BIOS menus and selections for your product may vary from those in this chapter. For the BIOS manual specific to your product, please contact Quanmax

---

AMI's ROM BIOS provides a built-in Setup program, which allows the user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will not need to be changed unless there is a configuration change in the system, such as a hard drive replacement or when a device is added.

It is possible for the CMOS battery to fail, which will cause data loss in the CMOS only. If this happens you will need to reconfigure your BIOS settings.

## ■ Main Menu

The BIOS Setup is accessed by pressing the DEL key after the Power-On Self-Test (POST) memory test begins and before the operating system boot begins. Once you enter the BIOS Setup Utility, the Main Menu will appear on the screen. The Main Menu provides System Overview information and allows you to set the System Time and Date. Use the “<” and “>” cursor keys to navigate between menu screens.

Table 57 BIOS Main Menu

BIOS SETUP UTILITY				
Main	Advanced	Boot	Security	Save & Exit
BIOS Information Version 0.03 Build Date 03/16/2011  CPU Information Intel® Core™ i7-2630QM CPU @ 2.00 GHz Microcode Revision 12 Processor Cores 4  Memory Information Total Size 4096 MB (DDR3) Frequency 1333 MHz  System Date [Tue 03/22/2011] System Time [11:38:22]				Set the Date. Use Tab to switch between Data elements.  →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.				

## ■ Advanced Menu

Table 58 Advanced Menu

BIOS SETUP UTILITY				
Main	Advanced	Boot	Security	Save & Exit
Full Item for Debug [Disabled] Onboard LAN1 Controller [Enabled] Onboard LAN1 Boot [Disabled] Onboard LAN2 Controller [Enabled] Onboard LAN2 Boot [Disabled] Audio Controller [Enabled]  ➤ Display Configuration ➤ Super IO Configuration ➤ Power Management Configuration ➤ SATA Configuration ➤ AMT Configuration ➤ USB Configuration ➤ H/W Monitor ➤ CPU Advanced Configuration				→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.				

Table 59 Advanced Menu – Display Configuration

BIOS SETUP UTILITY		
Advanced		
Display Configuration		Select which of IGFX/PEG/PCI Graphics device should be Primary Display or select SG for Switchable Gfx.
Primary Display	[AUTO]	
Internal Graphics	[AUTO]	
Aperture Size	[256MB]	
DVMT Pre-Allocated	[64M]	
DVMT Total Gfx Mem	[256M]	
IGFX – Boot Type	[VBIOS Default]	→←: Select Screen
Active LVDS	[No LVDS]	↑↓: Select Item
LVDS1 Panel Type	[VBIOS Default]	Enter: Select
LVDS2 panel Type	[VBIOS Default]	+/-: Change Opt.
LVDS1 Panel Backlight Voltage	[2.5 V]	F1: General Help
LVDS2 Panel backlight Voltage	[2.5 V]	F2: Previous Values
		F3: Optimized Defaults
		F4: Save and Exit
		ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Primary Display**

Options: Auto, IGFX, PEG, PCI, SG

**Internal Graphics**

Options: Auto, Disabled, Enabled

**Aperture Size**

Options: 128MB, 256MB, 512MB

**DVMT Pre-Allocated**

Options: 0M, 32M, 64M, 96M, 128M, 160M, 192M, 224M, 256M, 288M, 320M, 352M, 384M, 416M, 448M, 480M, 512M

**DVMT Total Gxf Mem**

Options: 128M, 256M, MAX

**IGFX – Boot Type**

Options: VBIOS Default, CRT, DVI, HDMI

**Active LVDS**

Options: No LVDS, LVDS1, LVDS2

**LVDS1 Panel Type**

Options: VBIOS Default, 1024x768 18bit 1Ch, 1280x1024 24bit 2Ch, 1366x768 24bit 2Ch, 1920x1080 24bit 2Ch

**LVDS2 Panel Type**

Options: VBIOS Default, 1024x768 18bit 1Ch, 1280x1024 24bit 2Ch, 1400x1050 24bit 2Ch, 1600x1200 24bit 2Ch

**LVDS1 Panel Backlight Voltage**

Options: 0.0V, 0.5V, 1.0V, 1.5V, 2.0V, 2.5V, 3.0V, 3.5V, 4.0V, 4.5V, 5.0V

## LVDS2 Panel Backlight Voltage

Options: 0.0V, 0.5V, 1.0V, 1.5V, 2.0V, 2.5V, 3.0V, 3.5V, 4.0V, 4.5V, 5.0V

### Table 60 Advanced Menu – Super IO Configuration

BIOS SETUP UTILITY	
Advanced	
Super IO Configuration  ➤ Serial Port 1 Configuration ➤ Serial Port 2 Configuration ➤ Serial Port 3 Configuration ➤ Serial Port 4 Configuration ➤ Serial Port 5 Configuration ➤ Serial Port 6 Configuration	Set parameters of Serial Port 1 (COM1)     →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.	

### Table 61 Advanced Menu – Super IO Configuration – Serial Port 1 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 1 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=3F8h ; IRQ=4;	
Change Settings	[Auto]	→←: Select Screen
Serial Port 1 Type	[RS232]	↑↓: Select Item
		Enter: Select
		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save and Exit
		ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

## Serial Port

Options: Disabled, Enabled

## Change Settings

Options: Auto, IO=3F8h; IRQ=4; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

## Serial Port 1 Type

Options: RS232, 422, 485

Table 62 Advanced Menu – Super IO Configuration – Serial Port 2 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 2 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=2F8h ; IRQ=3;	
Change Settings	[Auto]	→←: Select Screen
Device Mode	[Standard Serial Po...]	↑↓: Select Item
Serial Port 2 Type	[RS232]	Enter: Select
		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save and Exit
		ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Serial Port**

Options: Disabled, Enabled

**Change Settings**

Options: Auto, IO=2F8h; IRQ=3; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

**Device Mode**

Options: Standard Serial Port Mode; IrDA function, active pulse is 1.6uS.; IrDA function, active pulse is 3/16 bit time.

**Serial Port 2 Type**

Options: RS232, 422, 485

Table 63 Advanced Menu – Super IO Configuration – Serial Port 3 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 3 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=3E8h ; IRQ=7;	
Change Settings	[Auto]	→←: Select Screen
		↑↓: Select Item
		Enter: Select
		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save and Exit
		ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Serial Port**

Options: Disabled, Enabled

**Change Settings**

Options: Auto, IO=2E8h; IRQ=7; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F8h;  
 IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E8h;  
 IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

Table 64 Advanced Menu – Super IO Configuration –Serial Port 4 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 4 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Device Settings	IO=2E8h ; IRQ=10;	
Change Settings	[Auto]	
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Serial Port**

Options: Disabled, Enabled

**Change Settings**

Options: Auto, IO=2E0h; IRQ=10; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;  
 IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;  
 IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12



Table 65 Advanced Menu – Super IO Configuration –Serial Port 5 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 5 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=2F0h ; IRQ=11;	
Change Settings	[Auto]	→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Serial Port**

Options: Disabled, Enabled

**Change Settings**

Options: Auto, IO=2F0h; IRQ=10; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2E0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

Table 66 Advanced Menu – Super IO Configuration –Serial Port 6 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 6 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=2E0h ; IRQ=10;	
Change Settings	[Auto]	→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**Serial Port**

Options: Disabled, Enabled

**Change Settings**

Options: Auto, IO=2E8h; IRQ=3; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F8h;

IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E8h;  
 IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E0h;  
 IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

Table 67 Advanced Menu –Power Management Configuration

BIOS SETUP UTILITY		
Advanced		
Power Management Configuration		Select the highest ACPI Sleep State the System will enter, when the SUSPEND button is pressed.
ACPI Sleep State	[S3 (Suspend to RAM)]	
Restore AC Power Loss	[Power Off]	
Resume From S3 By PS/2 Keyboard	[Disabled]	
Resume From S3 By PS/2 Mouse	[Disabled]	
Resume By PCIE Device	[Disabled]	
Resume From S3 By USB Device	[Disabled]	
Resume By RTC Alarm	[Disabled]	
		→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

### ACPI Sleep State

Options: Suspend Disabled, S1 (CPU Stop Clock), S3 (Suspend to RAM)

### Restore AC Power Loss

Options: Power Off, Power On, Last State

### Resume From S3 By PS/2 Keyboard

Options: Disabled, Enabled

### Resume From S3 By PS/2 Mouse

Options: Disabled, Enabled

### Resume By PCIE Device

Options: Disabled, Enabled

### Resume From S3 By USB Device

Options: Disabled, Enabled

### Resume By RTC Alarm

Options: Disabled, Enabled

Table 68 Advanced Menu –SATA Configuration

BIOS SETUP UTILITY		
Advanced		
SATA Controller(s)	[Enabled]	Enable or Disable SATA Device.  →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
SATA Mode Selection	[IDE]	
Serial ATA Port 0	FIJITSU MH2216 (160.0	
Software Preserve	SUPPORTED	
Serial ATA Port 1	Empty	
Software Preserve	Unknown	
Serial ATA Port 2	Empty	
Software Preserve	Unknown	
Serial ATA Port 3	Empty	
Software Preserve	Unknown	
Serial ATA Port 4	Empty	
Software Preserve	Unknown	
Serial ATA Port 5	Empty	
Software Preserve	Unknown	
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**SATA Controller(s)**

Options: Enabled, Disabled

**SATA Mode Selection**

Options: IDE, AHCI, RAID

Table 69 Advanced Menu –AMT Configuration

BIOS SETUP UTILITY		
Advanced		
Intel AMT	[Enabled]	Enable/Disable Intel ® Active Management Technology BIOS Extension.  Note: iAMT H/W is always enabled.  This option just controls the BIOS extension execution.  If enabled, this requires additional Firmware in the SPI device  →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Intel AMT Setup Prompt	[Enabled]	
BIOS Hotkey Pressed	[Disabled]	
MEBx Selection Screen	[Disabled]	
Verbose Mebx Output	[Enabled]	
Hide Un-Configure ME Confirmation	[Disabled]	
MEBx Debug Message Output	[Disabled]	
Un-Configure ME	[Disabled]	
Intel AMT Password Write Enabled	[Enabled]	
Amt Wait Timer	0	
ASF	[Enabled]	
Activate remote Assistance Process	[Disabled]	
USB Configure	[Enabled]	
PET Progress	[Enabled]	
Intel AMT SPI Protected	[Disabled]	
AMT CIRA Timeout	0	
WatchDog	[Disabled]	
OS Timer	0	
BIOS Timer	0	

Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.

**Intel AMT**

Options: Disabled, Enabled

**Intel AMT Setup Prompt**

Options: Disabled, Enabled

**BIOS Hotkey Pressed**

Options: Disabled, Enabled

**MEBx Selection Screen**

Options: Disabled, Enabled

**Verbose Mebx Output**

Options: Disabled, Enabled

**Hide Un-Configure ME Confirmation Prompt**

Options: Disabled, Enabled

**MEBx Debug Message Output**

Options: Disabled, Enabled

**Un-Configure ME**

Options: Disabled, Enabled

**Intel AMT Password Write Enabled**

Options: Disabled, Enabled

**Amt Wait Timer**

Options: 0

**ASF**

Options: Disabled, Enabled

**Activate Remote Assistance Process**

Options: Disabled, Enabled

**USB Configure**

Options: Disabled, Enabled

**PET Progress**

Options: Disabled, Enabled

**Intel AMT SPI Protected**

Options: Disabled, Enabled

**WatchDog**

Options: Disabled, Enabled

### Table 70 Advanced Menu – USB Configuration

BIOS SETUP UTILITY		
Advanced		
USB Configuration		Enables legacy USB support.
USB Devices :		AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
1 Keyboard, 2 Mice, 2 Hubs		
Legacy USB Support	[Enabled]	
USB 3.0 Support	[Enabled]	
XHCI Hand-off	[Enabled]	
EHCI Hand-off	[Disabled]	
USB hardware delays and time-outs :		→←: Select Screen
USB transfer time-out	[20 sec]	↑↓: Select Item
Device reset time-out	[20 sec]	Enter: Select
Device power-up delay	[Auto]	+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save and Exit
		ESC: Exit

Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.

## Legacy USB Support

Options: Enabled, Disabled, Auto

## USB 3.0 Support

Options: Enabled, Disabled

## XHCI Hand-off

Options: Enabled, Disabled

## EHCI Hand-off

Options: Enabled, Disabled

## USB transfer time-out

Options: 1 sec, 5 sec, 10 sec, 20 sec

## Device reset time-out

Options: 10 sec, 20 sec, 30 sec, 40 sec

## Device power-up delay

Options: Auto, Manual

Table 71 Advanced Menu – H/W Monitor

BIOS SETUP UTILITY		
Advanced		
PC Health Status		
CPU Warning Temperature	[Disabled]	
CPU Shutdown Temperature	[Disabled]	
CPU temperature	: +8 C	
System temperature2	: +40 C	
System temperature3	: +40 C	
Fan1 Speed	: 5016 PM	
Fan2 Speed	: N/A	
+3.3V	: +3.296 V	
+VCORE	: +0.960 V	
+VGFX	: +0.440 V	
+1.05V	: +2.096 V	
+1.5V	: +1.032 V	
+5VDUAL	: +1.024 V	
+12V	: +1.096 V	
+3.3VSB	: +1.640 V	
+VCCRTC	: +1.624 V	
		→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**CPU Warning Temperature**

Options: Disabled, 80C, 85C, 90C, 95C

**CPU Shutdown Temperature**

Options: Disabled, 80C, 85C, 90C, 95C

Table 72 Advanced Menu – CPU Advanced Configuration

BIOS SETUP UTILITY		
Advanced		
CPU Advanced Configuration		Enable/Disable Intel SpeedStep
EIST	[Enabled]	
Turbo Mode	[Enabled]	
Intel (R) Virtualization Tech	[Disabled]	
Intel (R) Hyper Threading Tech	[Disabled]	
Active Processor Cores	[All]	
Limit CPUID Maximum	[Disabled]	
Execute Disable Bit	[Enabled]	
		→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.		

**EIST**

Options: Disabled, Enabled

**EIST**

Options: Disabled, Enabled

**Turbo Mode**

Options: Disabled, Enabled

**Intel ® Virtualization Tech**

Options: Disabled, Enabled

**Intel ® Hyper Threading Tech**

Options: Disabled, Enabled

**Active Processor Cores**

Options: All, 1, 2, 3

**Limit CPUID**

Options: Disabled, Enabled

**Execute Disable Bit**

Options: Disabled, Enabled

## ■ Boot Menu

Table 73 Boot Menu

BIOS SETUP UTILITY				
Main	Advanced	Boot	Security	Save & Exit
Boot Configuration Full Screen LOGO Display Setup Prompt timeout Bootup NumLock  Boot Option Priorities Boot Option #1  Hard Drive BBS Priorities			[Disabled] 1 [On]  [SATA: FUJITSU MHZ2...]	Enables or disables Quiet Boot option       →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.				

**Full Screen LOGO Display**

Options: Disabled, Enabled

**Setup Prompt Timeout**

Options: 1

**Bootup Numlock State**

Options: On, Off

**Boot Option #1**

Options: SATA: FUJITSU MHZ2160BH G2, Disabled

**Hard Drive BBS Priorities → Boot Option #1**

Options: SATA: FUJITSU MHZ2160BH G2, Disabled

**■ Security Menu**

Table 74 Security Menu

BIOS SETUP UTILITY				
Main	Advanced	Boot	Security	Save & Exit
<p>Password Description</p> <p>If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup</p> <p>If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights</p> <p>Administrator Password</p> <p>User Password</p> <p>HDD Security Configuration:</p> <p>HDD O: FUJITSU MHZ2</p>			<p>Set Setup Administrator Password</p> <p>→←: Select Screen</p> <p>↑↓: Select Item</p> <p>Enter: Select</p> <p>+/-: Change Opt.</p> <p>F1: General Help</p> <p>F2: Previous Values</p> <p>F3: Optimized Defaults</p> <p>F4: Save and Exit</p> <p>ESC: Exit</p>	
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.				

**Change Supervisor Password**

Select this item to set or change the supervisor password. The Supervisor Password item on top of the screen displays the default Not Installed. After you have set a password, this item displays Installed.

**Change User Password**

Select this item to set or change the user password. The User Password item on top of the screen displays the default Not Installed. After you have set a password, this item displays Installed.



## ■ Save & Exit Menu

Table 75 Save &amp; Exit Menu

BIOS SETUP UTILITY				
Main	Advanced	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset  Save Options Save Changes Discard Changes  Restore Defaults Save as User Defaults Restore User Defaults  Boot Override SATA: FIJITSU MHZ2160BH G2				Exit System Setup after saving the changes.   →←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save and Exit ESC: Exit
Version 2.10.1208. Copyright © 2010 American Megatrends, Inc.				

### Save Changes and Exit

Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.

### Discard Changes and Exit

Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.

### Discard Changes

Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.

### Load Optimal Defaults

Load Optimal Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will

provide the best performance settings for your system. The F9 key can be used for this operation.

### **Load Failsafe Defaults**

Load Optimal Default values for all the setup values. This option allows you to load failsafe default values for each of the parameters on the Setup menus, which will provide the most stable performance settings. The F8 key can be used for this operation.

## Chapter 5

# Driver Installation

If your KEMX-600A does not come with an operating system pre-installed, you will need to install an operating system and the necessary drivers to operate it. After you have finished assembling your system and connected the appropriate power source, power it up using the power supply and install the desired operating system. You can download the drivers for the KEMX-6000 from the Quanmax website at [www.quanmax.com](http://www.quanmax.com) and install as instructed there. For other operating systems, please contact Quanmax.

---

### NOTE



When the system reboots without connecting the CRT, there might be no image on screen when you insert the CRT/VGA cable. Please pressing **<Ctrl>+<Alt>+<F1>** simultaneously to show the image on screen.

---

## Appendix A

# DIO (Digital I/O) Sample Code

```

//*****
//KEMX-600A DOS DIO sample program
//Please compile with Turbo C 3.0 to utilized the program
//0:Low 1:High
//DI_1: IOport 0x50C bit2  DO_1: IOport 0x539 bit4
//DI_2: IOport 0x50C bit3  DO_2: IOport 0x539 bit5
//DI_3: IOport 0x50C bit4  DO_3: IOport 0x539 bit6
//DI_4: IOport 0x50C bit5  DO_4: IOport 0x53B bit0
//*****

int main()
{
    int RetVal;

    //Clear DO_1~4
    RetVal=inp(0x539);//IO Port: 0x539
    RetVal=(RetVal&0x8F);//DO_1 is bit 4
                //DO_2 is bit 5
                //DO_3 is bit 6
    outp(0x539,RetVal);

    RetVal=inp(0x53B);//IO Port: 0x53B
    RetVal=(RetVal&0xFE);//DO_4 is bit 0
    outp(0x53B,RetVal);
}

```

```
system("pause");

//Setting DO_1~4
RetVal=inp(0x539);//IO Port: 0x539
RetVal=(RetVal|0x70);//DO_1 is bit 4
           //DO_2 is bit 5
           //DO_3 is bit 6
outp(0x539,RetVal);

RetVal=inp(0x53B);//IO Port: 0x53B
RetVal=(RetVal|0x01);//DO_4 is bit 0
outp(0x53B,RetVal);

system("pause");

//Reading DI_1~4
RetVal=inp(0x50C);//IO Port: 0x50C
RetVal=(RetVal&0x3C);//DI_1 is bit 2
           //DI_2 is bit 3
           //DI_3 is bit 4
           //DI_4 is bit 5
printf("DI_ = %d\n",RetVal);
system("pause");

return 0;
}
```

## Appendix B

### WatchDog Timer Sample Code

```
//=====
//KEMX-600A DOS Watchdog sample program
//Please compile with Turbo C 3.0 to utilized the program
//=====

#include<stdio.h>
int main()
{
    int value;
    //Initialized the WDT program
    outp(0x2E,0x87);
    outp(0x2E,0x87);

    //Setting Logical Device Number to 0x07
    outp(0x2E,0x07);
    outp(0x2F,0x07);

    //0xF5 bit6
    //If watchdog timeout event occurs, this bit will be set to 1.
    //Write a 1 to this bit will clear it to 0.
    outp(0x2F,0xF5);
    value=inp(0x2F);
    outp(0x2F,(value | 0x40));

    //Set Timer unit
    //(0xF5 bit3(0: 1sec, 1: 60 sec) of watchdog timer by setting this bit)
    outp(0x2E,0xF5);
    value=inp(0x2F);
    outp(0x2F,(value & 0xF7));//set unit sec.

    //Set Timer Value(0xF6 Time of watchdog timer)
    outp(0x2E,0xF6);
    outp(0x2F,0x14);//set to 20 sec (0x14)

    //Enable WDT
    outp(0x2E,0xF5);
    value=inp(0x2F);
    outp(0x2F,(value | 0x30));//
```

```
    outp(0x2E,0xF0);  
    outp(0x2F,0x81); //bit7 WDTRST# output is enabled  
  
    return 0;  
}
```